



HP 550 notebook Ram memoria Replacement

Follow this guide to replace the Ram

Written By: Smilzo



INTRODUCTION

Follow this guide to replace the
Ram



TOOLS:


- [Screwdriver, Phillips no. 2](#) (1)
-

Step 1 — Ram memory



- remove battery
- Unscrew the door locking screw access RAM

Step 2

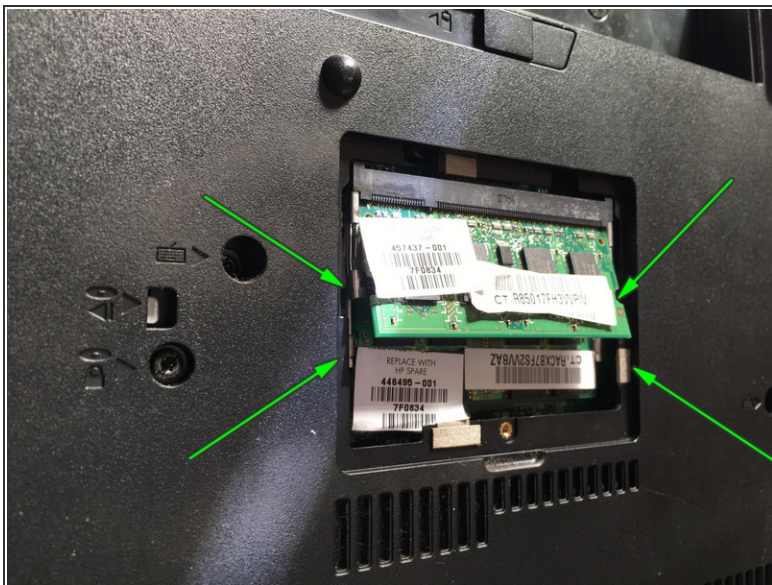

- Open the metal hooks horizontally enough to give the memory card you can free it from the rising
- Repeat the same action for the ram memory card below

Per rimontare il dispositivo, segui queste istruzioni in ordine inverso.

This document was last generated on 2017-06-18 08:45:31 AM.